

Appendix - Aurora DMX Control Specification - Software V1.12.0

Note: Both Channels 0 and 1 set the DMX base address of Aurora to 1.

| DMX Channel | Value | Function |
|-------------|---|--|
| 1 | 0-255 | Brightness |
| 2 | 0-5 6-11 12-17 18-23 24-28 29-34 35-40 41-46 47-52 53-57 58-63 64-69 70-75 76-82 83-86 87-92 93-98 100-104 105-110 111-115 116-121 122-127 128-132 134-139 140-144 145-150 151-156 157-162 163-168 169-173 174-179 180-185 186-191 192-198 199-203 204-208 | Palette Select Royal Sunrise Stained Glass Crest Galaxy Blue and Orange Northern Lights Prince Tribute Pink Blue Cyan Pink Cyan Candy Red + Green = Yellow Purple Thermometer Hot Coals Hot Pink Peach Rose Valentine Cozy Couch Halloween Brandy Snifter Coastal Water Caribbean Blue On the Rise Hawaii Leafy Greens St Patrick's Day Lemon Lime All White Cool White Off White Warm Yellow Yellow and White Christmas Red and White Red White and Blue Rainbow 1 |

| | | |
|----|--|---|
| | 209-214 215-220 221-226 227-231 232-237 238-243 244-249 250-255 | Rainbow 2 Rainbow 3 Rainbow Classic Spun Sugar Sweet Treats Retired in Miami Blue and Yellow Purple and Teal |
| 3 | 0-14 15-29 30-44 45-59 60-74 75-89 90-104 105-119 120-134 135-149 150-164 165-179 180-194 195-209 210-224 225-255 | Pattern Select Plasma Spectrum Waves Waterfall Sweep Twinkle Starry Sky Expander Solid Color Heart Popcorn Sonar Mapping Test Ripple Shoreline All Black |
| 4 | 0-255 | Transition Duration |
| 5 | 0-255 | Speed |
| 6 | 0-255 | Energy |
| 7 | 0-255 | Variance |
| 8 | 0-255 | Decay |
| 9 | 1-127 128-255 | Audio Reactive Toggle Audio Reactive Mode Non-Audio Reactive Mode |
| 10 | 1-127 128-255 | Audio Gain Mode Auto Gain Manual Gain |
| 11 | 0-255 | Audio Manual Gain Value |

| | | |
|--|--|---|
| | | <i>Note: Gain setting be ignored unless DMX channel 10 is > 127.</i> |
|--|--|---|